


Motorized Bottom-Up Roller Arch Standard Shade Instructions

Congratulations on your purchase of a specialty shade from DEL/BFL. If you have any questions, please call technical support at 1-800-483-5550 or email us at info@bradingfabrication.com

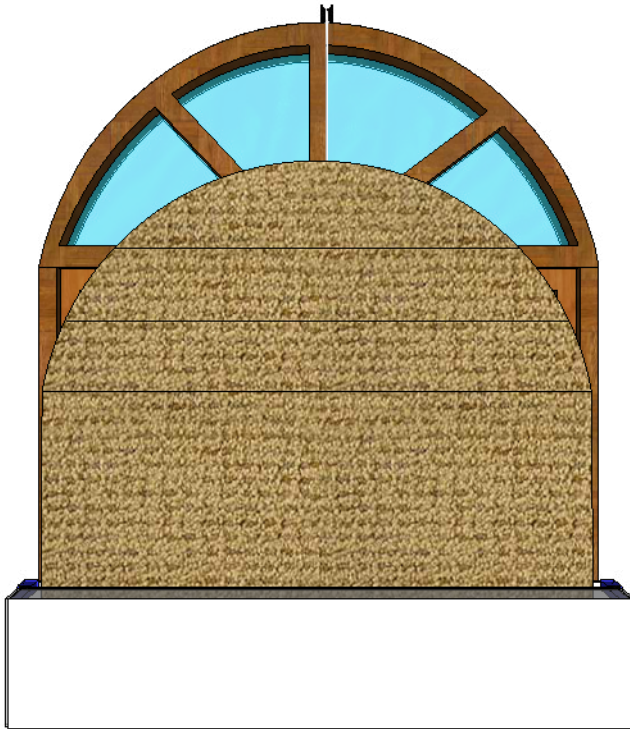

Important Notes - Please Read Before Installing



CAUTION: RISK OF FALLING OBJECTS

Securely install the shade system per the mounting instructions. Failure to do so could result in minor or moderate injury.



WARNING: SHOCK HAZARD

Can cause serious injury or death. Turn off power at the main service panel before connecting or servicing a shade with a wired power supply.



Shade brackets and hardware are to be anchored into wood blocking. If wood blocking is not available, you must use appropriate fasteners (not included) to support the weight of the system and load.



Pre-drill all holes with the appropriate size bit.

TOOLS REQUIRED

Pencil, Tape Measure, Powered Screwdriver / Drill, Level, 1/4 hex head driver, #2 Phillips screwdriver, wire cutter/stripper, drill bits.




Brading Fabrication Ltd. (BFL) is the exclusive distributor for DEL products in Canada.
bradingfabrication.com | 1-800-483-5550 | info@bradingfabrication.com




Step 1 - Install the Pulley

Install the top pulley using anchors strong enough to support the load plus 10 LBS.

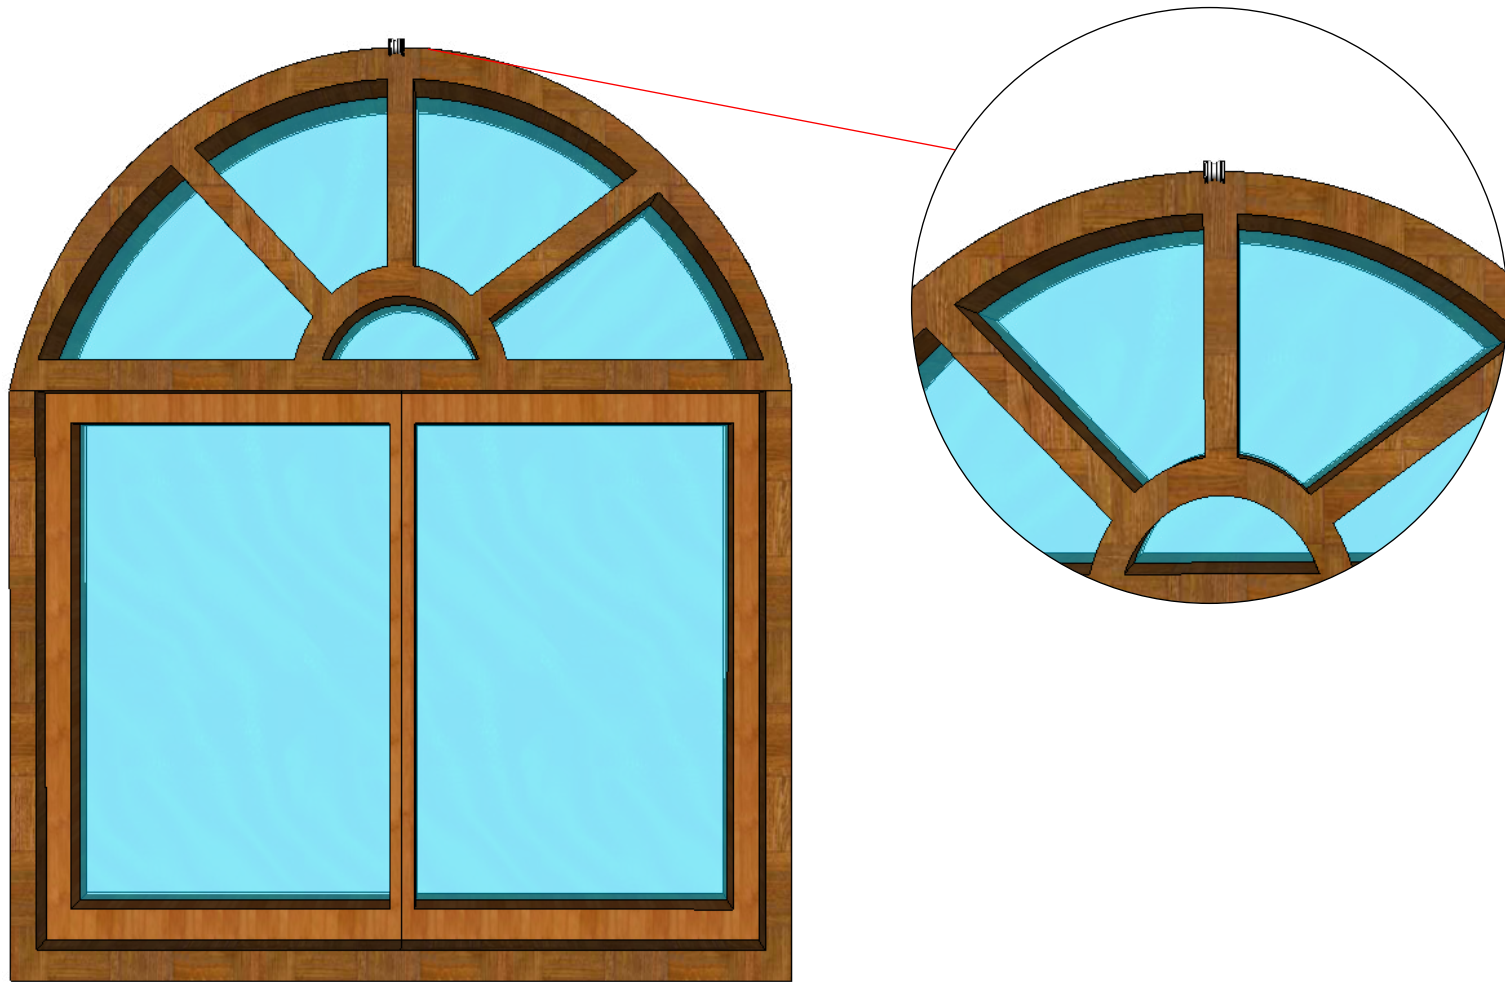



Step 2 - Shade Assembly

Place the shade assembly in front of the window opening and level it.

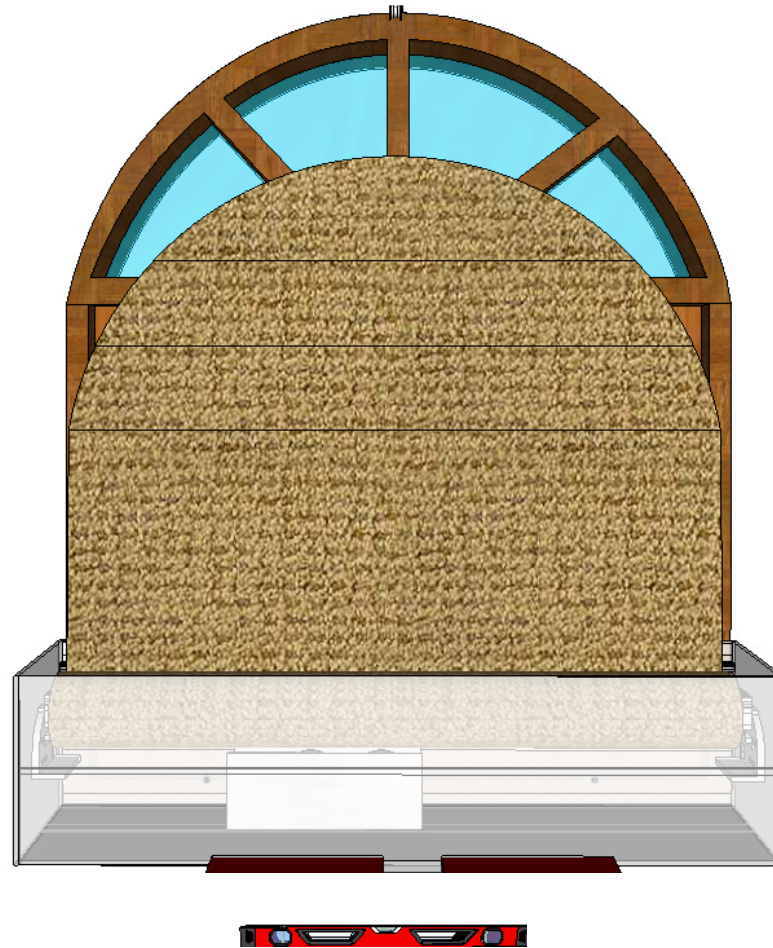


Step 3 - Anchoring the Shade Assembly

Anchor the shade assembly to the vertical or horizontal surface using anchors strong enough to support the load plus 10 LBS.

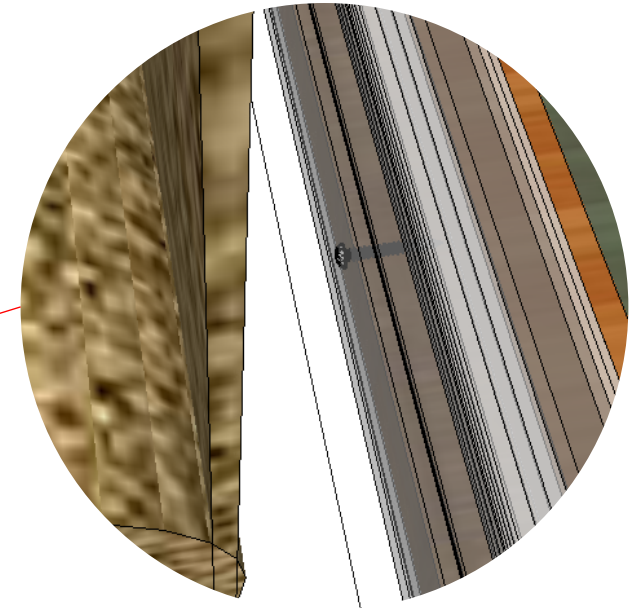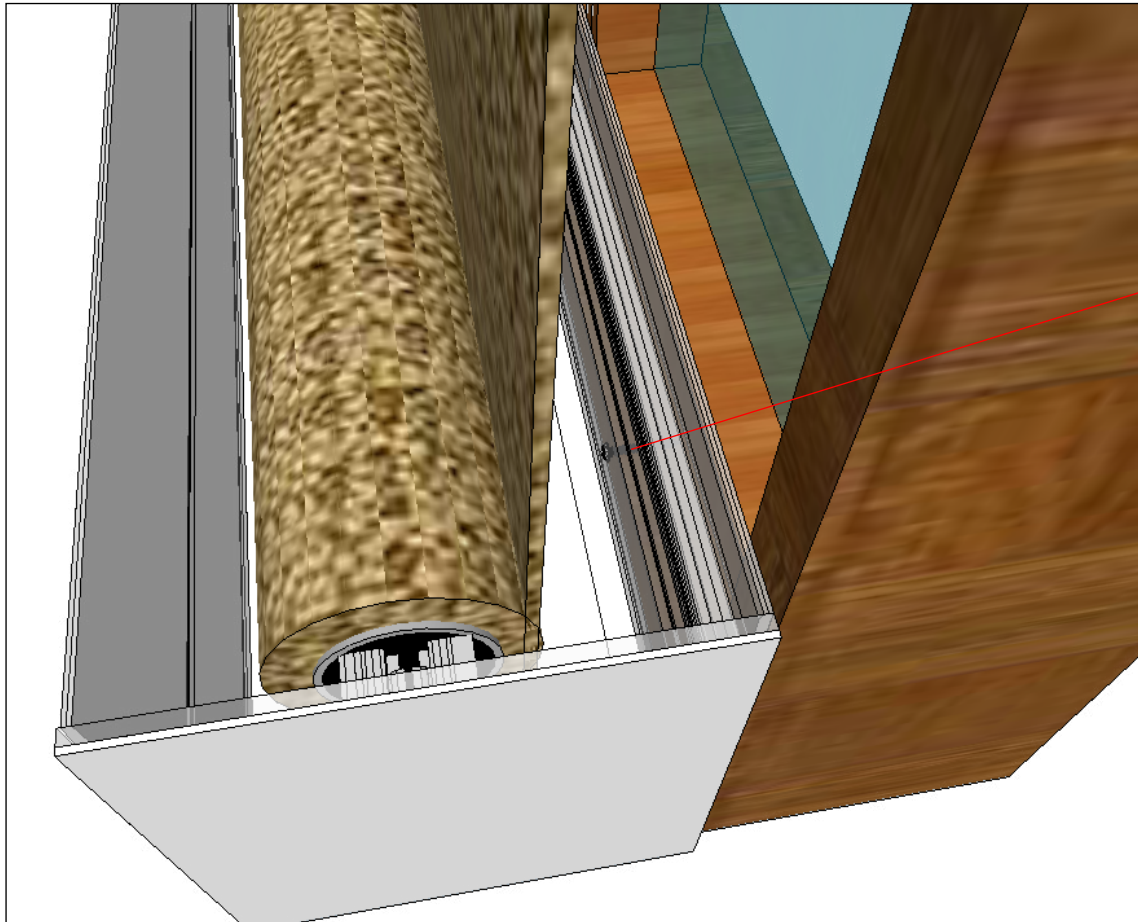

Step 4 - Connected The Lift Cord

Pull the lift cord up, through the pulley, through the top shade ring, and tie it off to the lower ring which is attached to the horizontal spline.
Note: temporarily separate the Velcro strip. Replace it after tying off the cord.

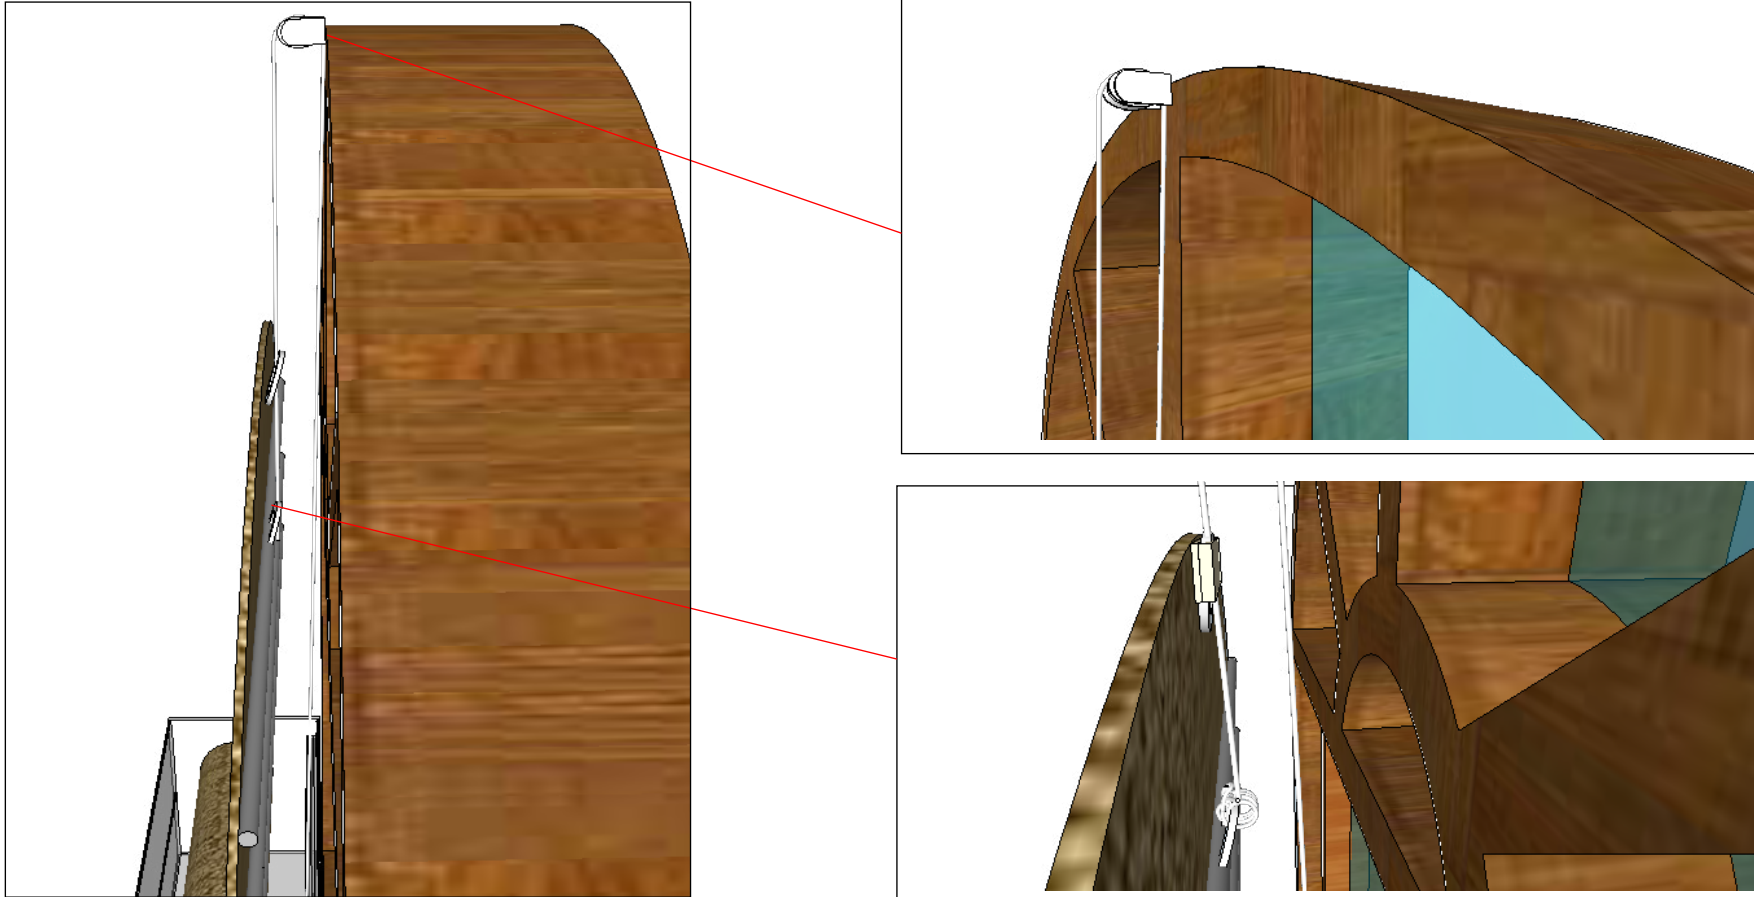

Proceed to programming. A link to programming guides is provided at the last page of this instruction manual.



Fine Tuning The Cords

Slide each spring left or right so that the lift cords are straight and plumb. Then tighten the two set screws to lock the spring in place.



Programming Guides

Please scan the QR code or click the link below to be forwarded to the programming guides for instructions on how to set the upper and lower limits, assigning controls, etc.



Use the QR code above to access the instruction guide from a smart device.

[Click Here](#)

Use the link above to access the instruction guide from an electronic device.

