

Note: When ordering your motorized drapery tracks from Lutron, order them as "recessed mount"




















## Cut track cavity to length

Connect idle box and motor box cavities to track box cavity

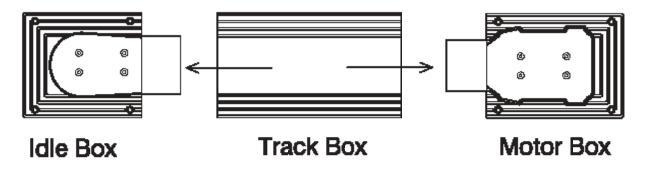

## **NOT TO SCALE**

Drill holes at a maximum of 3 foot intervals and install screws, anchoring the cavity to the blocking. Screw heads must be flush.

